

VH281301

**OLYMPUS®**

# Quick Start Guide FE-110/X-705 FE-100/X-710 Start Here

- The images of the LCD screen and illustrations of the camera used in this manual may differ from the actual product. For this manual, all of the images are based on the FE-110/X-705 model.

For more information, please refer to the Basic & Advanced Manual or visit [www.olympusamerica.com/support](http://www.olympusamerica.com/support)

OLYMPUS IMAGING AMERICA INC.

 
## BEFORE YOU BEGIN

- The camera you have purchased comes with its own internal memory. Even when an xD-Picture Card is not inserted, your pictures will be saved on the internal memory.


### Gather these items (box contents)



Digital Camera

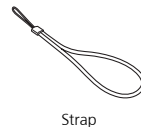


Strap

 


AA (R6) Batteries (two)

 This box also contains:  
Advanced Manual (CD-ROM), Basic Manual, Warranty card. Contents may vary depending on purchase location.



USB Cable (light gray)

 

Video Cable (black)



OLYMPUS Master software CD-ROM


An xD-Picture Card is included with the FE-110/X-705 model only.



## 1

 
### GETTING STARTED

#### a. Attach the strap

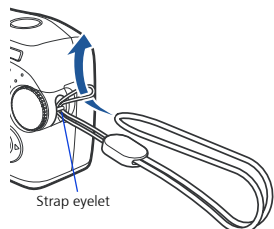

Pull the strap tight so that it does not come loose.



#### b. Insert the batteries

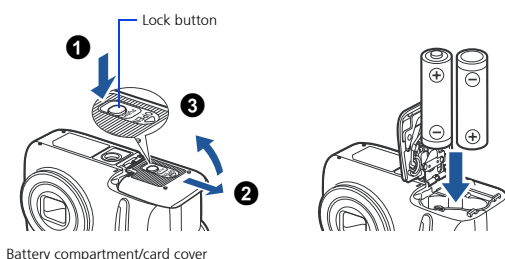 

Battery compartment/card cover

#### c. Set the date and time

  - Turn the mode dial to **P-AUTO** and press the power switch to turn the camera on.
- Press to display the menu screen.
- Press to set an item. Press to select the next field.

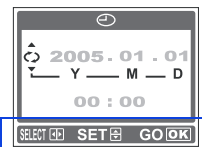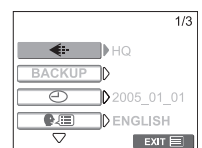


Operation guide

## 2

 
### TAKE A PICTURE

#### a. Zoom

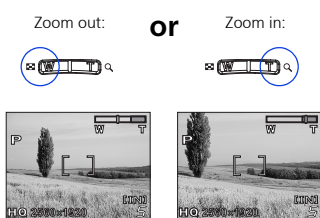

#### b. Focus

 
- Using the monitor, place the AF target mark over your subject.

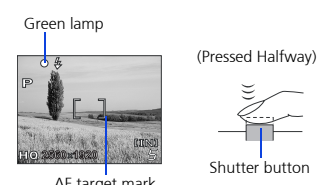


- Press and hold the shutter button halfway to lock focus.
  - The green lamp indicates focus is locked.

#### c. Take the picture

 Press the shutter button completely to take the picture. (Press Completely.)



## CAMERA DIAGRAM

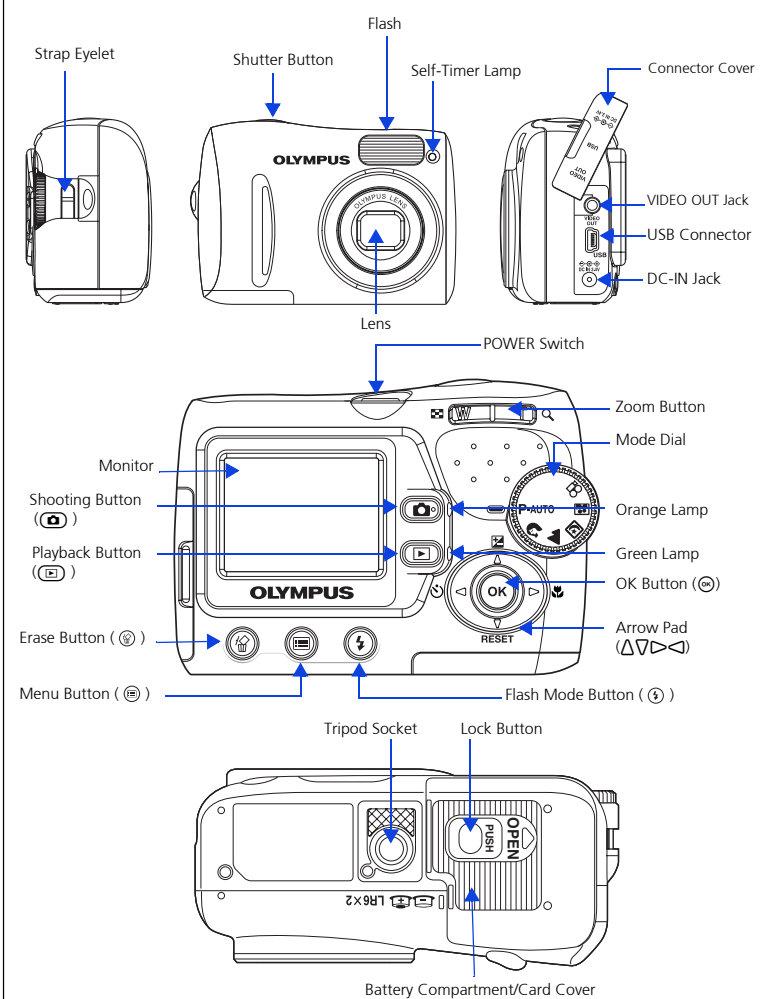 


## 3

### REVIEW OR ERASE A PICTURE


#### a. Press

- The last picture taken will be displayed.

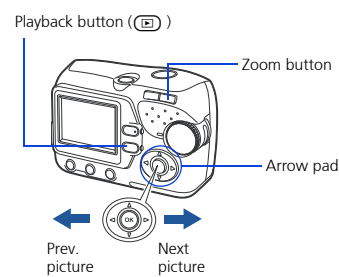 

#### b. Take a closer look

 
- Press to enlarge the image.
- Press to return to normal.
- Press or to scroll around.

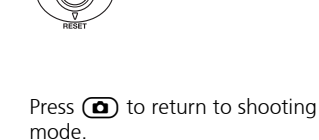


Press to return to shooting mode.

#### c. To erase a picture

 - Display the picture you want to erase.
- Press .

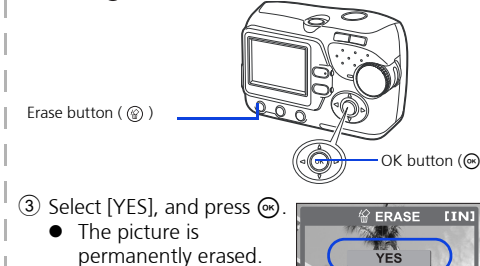

 - Select [YES], and press .
  - The picture is permanently erased.

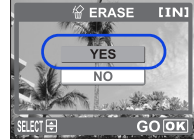

## 4

### TRANSFER IMAGES

#### a. Install the software

 
- Insert the OLYMPUS Master CD-ROM.
- Windows:** Click the "OLYMPUS Master" button.  
**Macintosh:** Double-click the "Installer" icon.
- Simply follow the on-screen instructions.




Remember to register your camera when you install OLYMPUS Master or by visiting: [www.olympusamerica.com/prodreg](http://www.olympusamerica.com/prodreg)

#### b. Connect the camera to the computer

- Connect the camera and computer using the USB cable (included).
  - The monitor will turn on automatically.

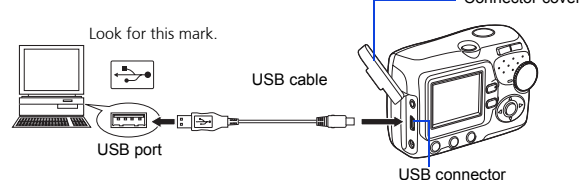


 - Select [PC] on the monitor, and press .
  - Your PC will now recognize your camera as a removable storage drive.

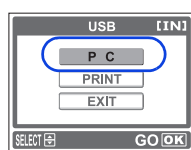


#### c. Transfer images to the computer

 - With the camera now connected, open OLYMPUS Master. The [Transfer Images] window is displayed.
- Select the images you want to transfer, and click the [Transfer Images] button.

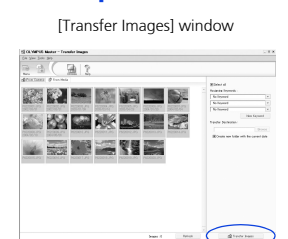

If the [Transfer Images] window is not displayed automatically:

 - Click the "Transfer Images" icon on the OLYMPUS Master main menu.
- Click the "From Camera" icon.

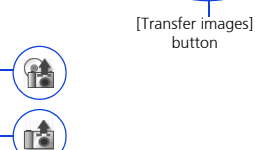

**OLYMPUS®**

# Guia de iniciação rápida FE-110/X-705 FE-100/X-710

# Começar aqui

- As imagens do ecrã LCD e as ilustrações da câmara utilizadas neste manual podem diferir do produto real. Neste manual, todas as imagens têm como base o modelo FE-110/X-705.

Para maiores informações, consulte os Manuais Básico e Avançado ou visite a página web [www.olympusamerica.com/support](http://www.olympusamerica.com/support)

OLYMPUS IMAGING AMERICA INC.

 
## ANTES DE COMEÇAR

- A câmara que adquiriu dispõe da sua própria memória interna. Mesmo que não seja inserido um xD-Picture Card, as fotografias serão gravadas na memória interna.


### Reúna estes itens (conteúdo da caixa)



Câmera Digital



Correia

 Pilhas AA (R6)  
(duas)

Cabo USB (cinzento-claro)



Cabo de vídeo (preto)

CD-ROM do software  
OLYMPUS Master


Esta embalagem também contém: Manual Avançado (CD-ROM), Manual Básico, Cartão de Garantia. O conteúdo pode variar conforme o local de aquisição.

O Cartão xD-Picture Card só é incluído com o modelo FE-110/X-705.




## 1 INICIAÇÃO
 
### a. Colocar a correia

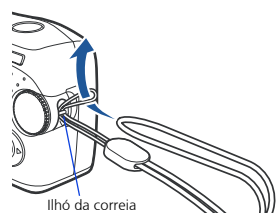


Puxar bem a correia de modo a que não fique solta.

### b. Inserir as pilhas

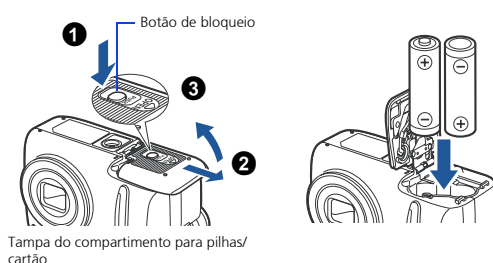 
Tampa do compartimento para pilhas/  
cartão

### c. Definir a data e hora

 - Rode o selector de modo para **P-AUTO** e prima o botão de ligação para ligar a câmara.
- Premir para visualizar o ecrã do menu.
- Premir para definir um item. Premir para seleccionar o campo seguinte.

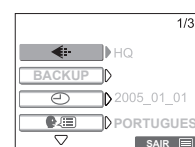


Guia de funcionamento

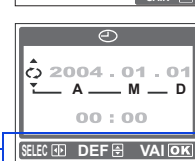 


## 2 FOTOGRAFAR
 
### a. Zoom

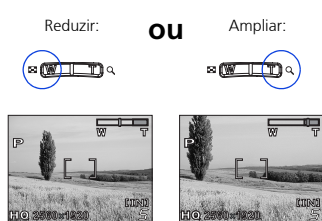

### b. Focar

 - Utilizando o ecrã, colocar a marca AF sobre o tema fotográfico

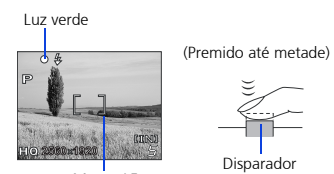

(Premido até metade)

Marca AF


- Premir o disparador até metade e manter nessa posição para bloquear a focagem.
  - A luz verde indica que a focagem está bloqueada.

### c. Fotografar

 Premir totalmente o disparador para fotografar. (Totalmente premido)




## DIAGRAMA DA CÂMARA

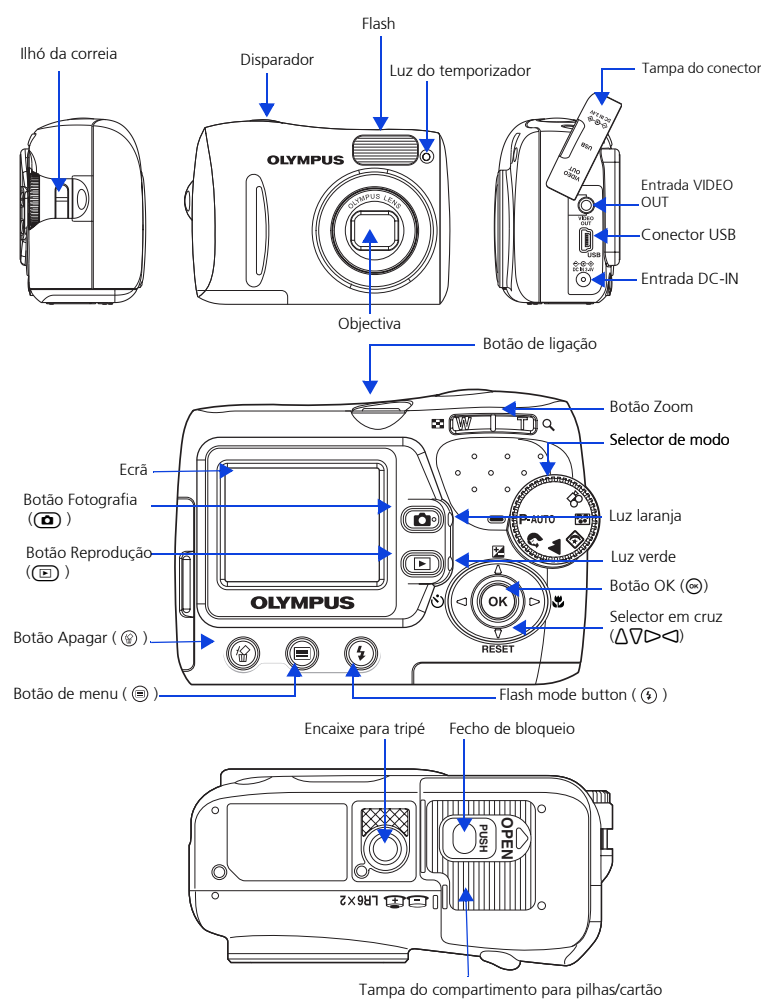

## 3 REVER OU APAGAR UMA FOTOGRAFIA

### a. Premir

 - A última imagem fotografada será visualizada.

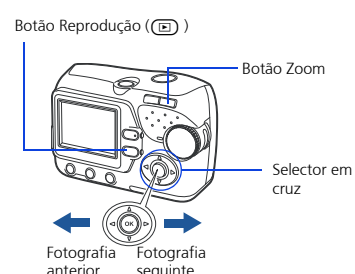

### b. Ver mais de perto

- Prima T () para ampliar a fotografia.
- Prima W () para voltar ao normal.
- Premir ou para percorrer a imagem.

 
Premir para voltar ao modo fotografia.

### c. Para apagar uma fotografia

- Visualizar a fotografia que pretende apagar.
- Premir .

Botão Apagar ()

- Seleccionar [SIM] e premir
  - A fotografia é eliminada permanentemente.

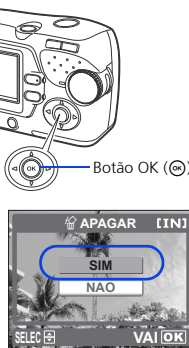

## 4 TRANSFIRA IMAGENS

 
### a. Instalar o software

- Inserir o CD-ROM OLYMPUS Master.
- Windows:** Fazer clique no botão "OLYMPUS Master".  
**Macintosh:** Fazer duplo clique no ícone "Installer".
- Seguir simplesmente as instruções no ecrã.

Lembre-se de registar sua câmara quando instalar OLYMPUS Master ou visitando: [www.olympusamerica.com/prodreg](http://www.olympusamerica.com/prodreg)


### b. Ligar a câmara ao computador

- Ligar a câmara ao computador usando o cabo USB (incluído).
  - O ecrã ligar-se-á automaticamente.

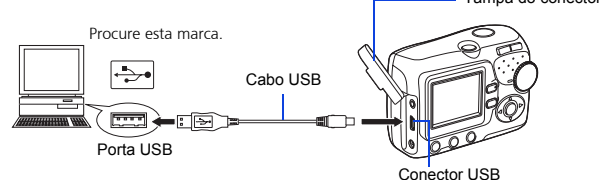

- Seleccionar [PC] no ecrã e premir .

 - O PC reconhece agora a câmara como um disco amovível.

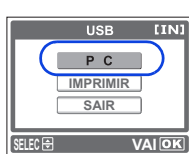


### c. Transferir imagens para o computador

- Com a câmara ligada, abrir o OLYMPUS Master. Surge a janela [Transfer Images] (Transferir imagens).
- Seleccionar as imagens que pretende transferir e fazer clique no botão [Transfer Images] (Transferir imagens).

Se a janela [Transfer Images] (Transferir imagens) não surgir automaticamente:

 - Fazer clique no ícone "Transfer Images" (Transferir imagens) no menu principal do OLYMPUS Master.
- Fazer clique no ícone "From Camera" (Da câmara).

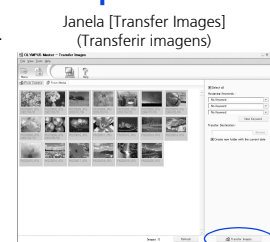

Botão [Transfer Images] (Transferir imagens)

Botão [Transfer Images] (Transferir imagens)